

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://genpipe.nt-rt.ru/> || gpn@nt-rt.ru

Model 88



The **Model 88** is almost as easy to run as a lawnmower. You push eight- or ten-foot cable sections into the line until you reach some resistance. Then attach the rear cable coupling to the machine, stand behind it, and turn it on. Watch the cable feed itself into the line. When a section has run into the drain, attach another one and keep going. This self-feeding feature also works to pull sections out of the line.

The Model 88 handles jobs up to 200 ft. long in lines from 3" to 10" diameter. A standard 3/4 hp capacitor motor supplies plenty of power, and an adjustable safety clutch protects cables and operator.

Sections come in two styles: all-purpose Flexichain, which has a chain center, and the stiffer Proflex, which has a spring center. A chain assures easier cable retrieving if the Flexichain spring should break. The inner spring in the Proflex gives it greater stiffness, which is desirable for long or tough jobs. The outer spring is right-hand wound for faster self-feeding.

Couplings are shown below. Both types snap together in a second and are taken apart quickly with a spanner wrench or screwdriver. With the newer "G" connector, no tension is on the locking pin when running in reverse, making it a more durable coupling.

Snap on the optional 78L-CDC adapter and you can use 6 ft. x 7/8" cables (6L78) to clear smaller lines.

SPECIFICATIONS

Weight:

80 lbs. (36 kg) without cables.

Dimensions:

21" wide x 16" high with handle folded down. (53 cm x 41 cm)

Motor:

3/4 hp with capacitor and 20 ft. power cord with Ground Fault Circuit Interrupter; rotates 1-1/4" diameter cables at 500 rpm.

Gear Head:

Rugged cast iron body, ball bearings, cut gears.

Wheels:

10" rubber rear wheels, 6" solid rubber caster wheel.

Combination Hand or Foot Operated Power Switch:

Air activated for safety; no electrical connection between motor and switch; can be used as hand or foot switch. Eleven foot air hose.

Power Switch:

Has an "off" position to de-activate the control switch.

Adjustable Safety Clutch:

Factory set at 18-20 ft. lbs. Protected by a tamper- resistant snap-on cover.

Folding Handle:

Reduces truck storage space. Flips down in a second but is completely secure in operating position.

Cutter Set with "G" Connectors:

Spear Head, Hook Auger, 2" U-Cutter, 3" Heavy Duty Side Cutter, 3" Heavy Duty Saw Blade, 4" Rotary Saw Blade, Large Retrieving Tool, Coupling Wrench.

Cutter Set with "L" Connectors:

Spear Head, Hook Auger, 2" U-Cutter, 3" Heavy Duty Side Cutter, 3" Heavy Duty Saw Blade, 4" Rotary Saw Blade, Large Retrieving Tool, Coupling Wrench.

Sectional Cables:

Four, Eight and ten foot "Cable Saver" sections come in all purpose Flexichain® which has a chain center, and a stiffer Proflex® which has a spring center. Proflex is also available in a heavier duty 5/8" spring center. Available with 'G' or 'L' connectors

MODEL 88 UNITS - COMPLETE AND READY TO OPERATE

Item #	Catalog #	Description	Weight
112405	88-GP	Model 88, plus ten 10GP Proflex sections with "G" connectors, and RDCS-G cutter set.	268 lbs
112415	88-GF	Model 88, plus ten 10GF Flexichain sections with "G" connectors, and RDCS-G cutter set.	248 lbs
112515	88-8LP	Model 88, plus thirteen 8LP Proflex sections (104 ft.) with "L" connectors, and RDCS-L cutter set.	277 lbs
112505	88-LP	Model 88, plus ten 10LP Proflex sections with "L" connectors, and RDCS-L cutter set.	268 lbs
112510	88-LF	Model 88, plus ten 10LF Flexichain sections with "L" connectors, and RDCS-L cutter set.	248 lbs

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://genpipe.nt-rt.ru/> || gpn@nt-rt.ru